

Kodak

Use Kodak Premier Digital paper on Frontier 570 machine




Paper Identification Procedure – Paper identification must be performed for each paper size and each magazine.

Step 1



From the Main Menu screen, select: **“Setup and Maintenance”**

Step2

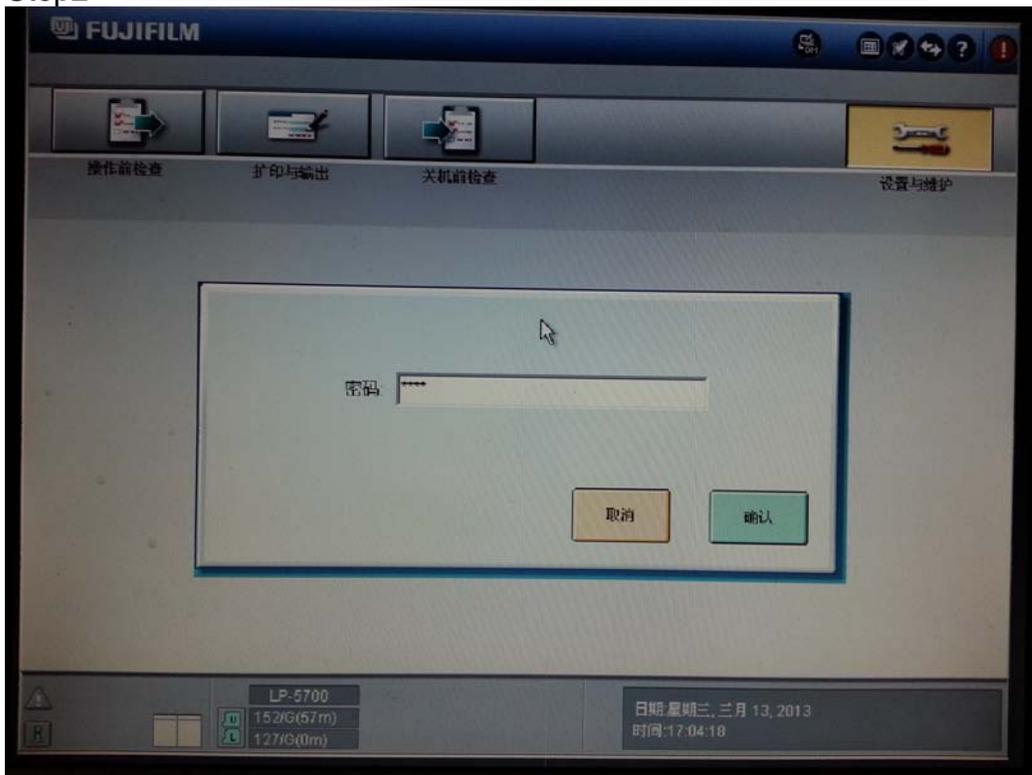

Kodak Phototech Center

Type in the Password **“7777”**, click **“OK”**

Step3




Select: 02 - Print Condition Setup and Check

Step4



Next, from the SAME menu Select: 0221 Paper Magazine Registration

Step5

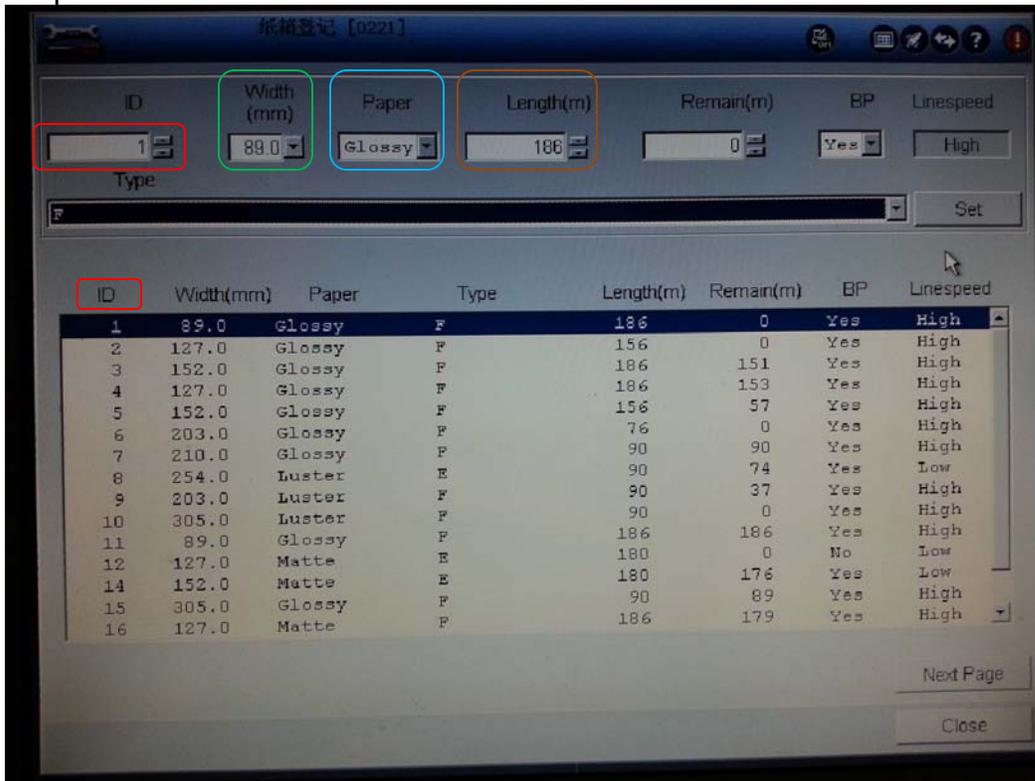


Enter paper ID information for each paper size to be calibrated as follows:

Click on **ID#** to select that magazine **ID** - it will highlight. -- *Paper ID in the table should match the ID# on the paper magazine being changed*

Select paper **Width(mm)** base on your paper size:
4"=102 / 5"=127 / 6"=152 / 8"=203 / 12"=305

Select **Paper Surface** type: glossy=F surface / luster=E surface / matte=N surface

Length refers to the length in meters (m) of your full paper roll. Consult label on paper roll

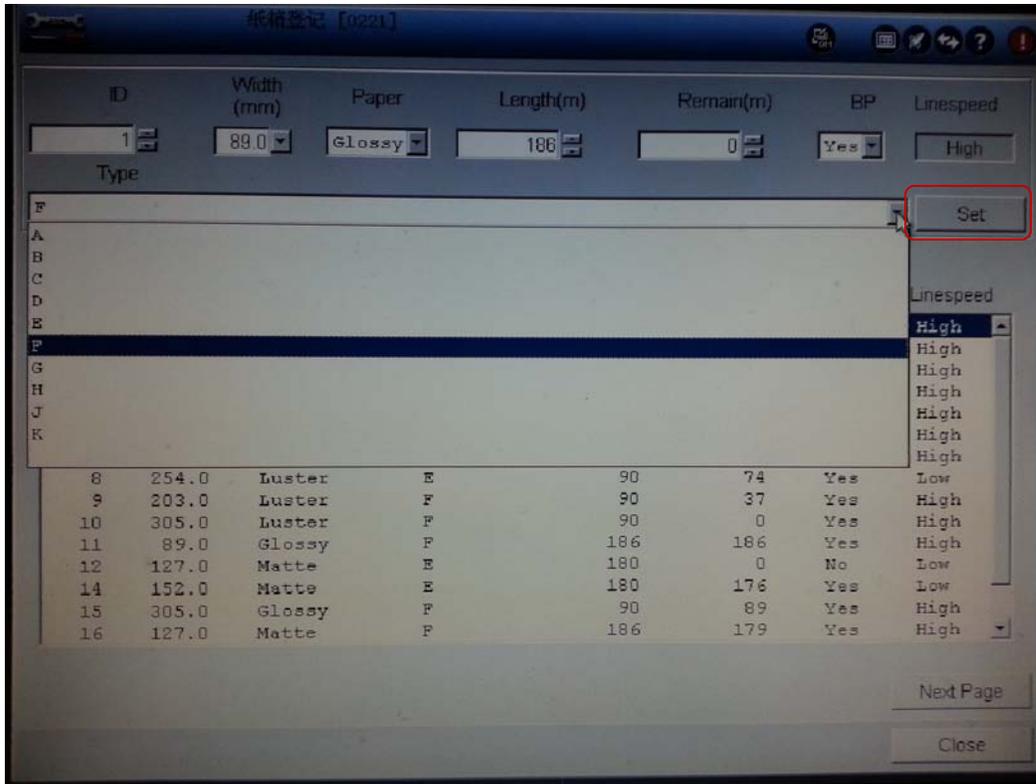

Select **Type "A"** from the pull down menu – This pertains to the paper calibration characteristics and DOES NOT pertain to the paper surface. Commonly **Type A** should be selected for all Kodak papers.

Any change you need confirm and save, just click "**Set**" button, then click "Close" to exist

Paper Identification for the Fuji Frontier 570 is now complete.


Proceed to the **Paper Calibration Procedure** to perform the Print Condition for each paper size and paper surface.

Paper Calibration Procedure – Paper calibration must be performed for each paper size and each surface of paper immediately following the paper identification procedure.
Step 1



From the Main Menu screen, select: **“Setup and Maintenance”**

Step2

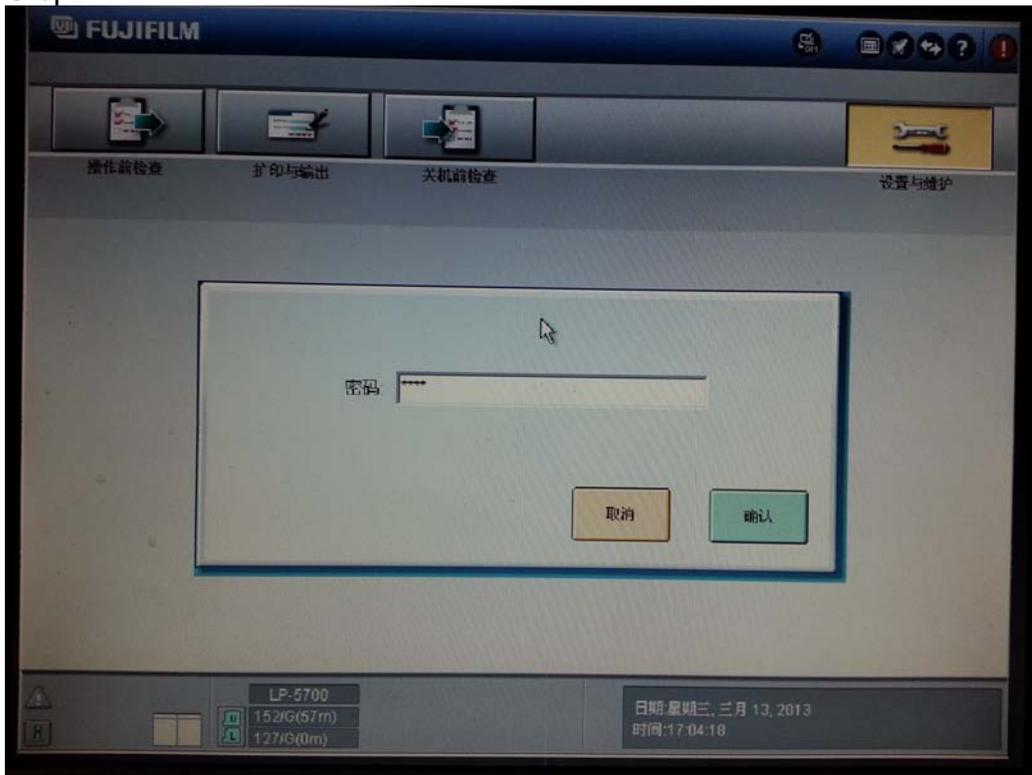

Type in the Password **“7777”**, click **“OK”**

Step3




Select: 02 - Print Condition Setup and Check

Step4



Next, from the SAME menu Select: 0200 Paper Condition Setup

Step5

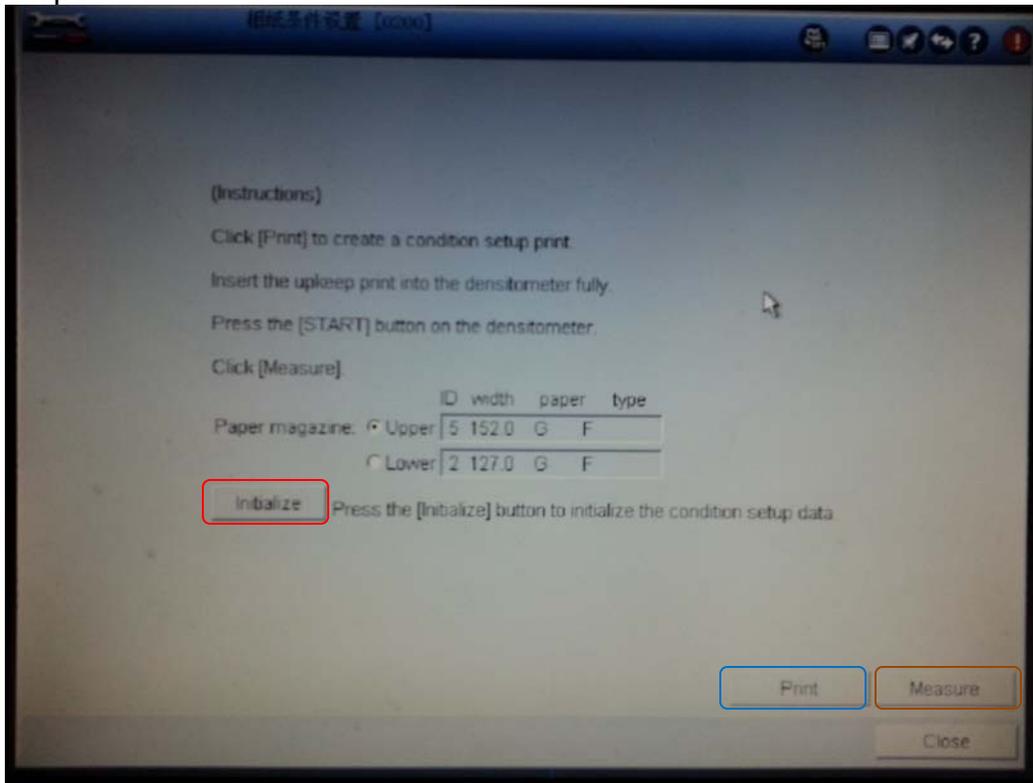

Click the **Initialize** button. Do this **ONLY** the first time you calibrate this paper, as it resets the starting point for calibration.

Click the **Print** button to generate a calibration test print.

Feed the Test Print into Densitometer.

Click the **Measure** button.

If the result show "NG" – not good, then you need repeat to print a calibration test print and measure again.

If the result show "OK", then you may click "Close" to finish the calibration procedure.

After "OK" and exit, the Paper Calibration procedure for the Fuji Frontier 570 is complete and you may print customer work. Repeat the procedure for each paper size starting at **Step 1** of the **Paper Calibration Procedure** after the magazine has been registered.